AKAI

MANUALE D'ISTRUZIONI

lavatrice a carica frontale completamente automatica

Modeli：AQUA8051AS
AQUA9060AS
AQUA1060AS



Grazie per aver scelto la nostra lavatrice.

La preghiamo di leggere attentamente le istruzioni presenti in questo manuale prima di installare ed utilizzare la lavatrice per la prima volta.

INDICE

Avvertenze ---------- 2

Informazioni per la sicurezza ---------- 3

Nomi delle parti ---------- 4

Istruzioni per l'installazione ---------- 5

Metodi di chiusura e apertura dello sportello ---------- 9

Metodo di utilizzo della vaschetta del detersivo ---------- 10

Funzioni del pannello operativo---------- 11

Introduzione ai programmi e alle funzioni ---------- 12

programmi della lavatrice ---------- 14

Manutenzione ---------- 15

Assenza di malfunzionamenti---------- 18

Risoluzione Problemi---------- 19

Specifiche ---------- 21

⚠ AVVERTENZE

- Questo prodotto non è stato pensato per essere usato da persone(inclusi i bambini) con ridotte capacità psichiche, sensoriali o mentali, o con mancanza di esperienza o conoscenza, queste persone devono sempre essere controllate da una persona che è responsabile della loro sicurezza.
- I bambini devono essere controllati /o supervisionati al fine di assicurarsi che non giochino con l'apparecchio.
- Il prodotto può essere usato da bambini di età pari o superiore di 8 anni e persone con ridotte capacità mentali psichiche o fisiche solo se controllati e se sono in grado di capire gli eventuali pericoli al fine di evitare eventuali danni o lesioni. I bambini non dovrebbero giocare con il prodotto. La pulizia e la manutenzione non deve essere effettuata da bambini senza una supervisione.
- I bambini con età inferiore a 3 anni devono stare lontani dal prodotto, ad eccezione che ci sia un continuo controllo da parte di un supervisore.
- Se il filo della corrente è danneggiato. Deve essere riparato o sostituito dal costruttore, o da eventuali persone qualificate al fine di evitare pericoli.
- ATTENZIONE: Al fine di evitare pericoli dovuti ad un Reset accidentale, questo apparecchio non deve essere alimentato attraverso un dispositivo esterno, ad esempio un temporizzatore o ad altre forme di alimentazione che non sono sempre collegate.
- Il nuovo set di tube fornito con l'apparecchio deve essere riutilizzato e il set di tubi vecchio non deve essere riutilizzato.

Informazioni per la sicurezza (Si prega di seguirle)

- Al fine di prevenire eventuali danni causati a persone o cose, è necessario seguire le seguenti regole.

⚠AVVERTENZE

- Rischio di scossa elettrica

1. Prego utilizzare 220-240V , superiore a 10 A con presa a terra.
2. Quando inserisci o stacchi l'alimentazione si prega di utilizzare la spina. Non utilizzare un filo danneggiato. Quando il filo è sporco si prega di pulirlo.
3. Non inserire o staccare la spina con le mani bagnate.
4. Prego staccare la spina durante la pulizia o la riparazione.

- Pericolo d'incendio o dispersione di corrente

1. non mettere la lavatrice vicino a fonti di calore o non usare sigarette o altri materiali infiammabili vicino alla lavatrice.
2. Non spruzzare l'acqua sul pannello della lavatrice
3. Non mettere la lavatrice in luoghi bagnati o all'esterno.
4. Prego, fissare la pompa di scarico e assicurarsi che la fogna non sia ostruita .

- Pericoli delle alte temperature

1. Quando la lavatrice è calda il vetro dello sportello scotterà, non toccare, specialmente i bambini.
2. Quando la lavatrice finisce, prego attendere qualche minuto e lo sportello si sbloccherà automaticamente una volta raffreddato

- Eventuali pericoli

1. Prego, rimuovere il cartone, non permettere che venga toccato o mangiato dai bambini.
2. Non permettere che i bambini salgano sulla lavatrice.
3. Assicurarsi sempre di chiudere lo sportello al fine di evitare che i bambini entrino.

- Pericoli di lesioni

1. Non mettere oggetti pesanti sopra la lavatrice.
2. Se vuoi spostare la lavatrice, chiedi sempre aiuto.
3. Chiedere sempre a personale qualificato di riparare eventuali danni.

- Danneggiamento dei tessuti

1. Non lavare indumenti che sono resistenti all'acqua(impermeabili), come ad esempio giacche a vento, tessuti di piuma o sacchi a pelo.
2. Prego lavare indumenti di cui si è certi , altrimenti consultare le istruzioni

- Pericolo di esplosione



1. Non lavare indumenti sporchi di Kerosene, Benzina o altre sostanze infiammabili.
2. Non utilizzare la lavatrice in caso di perdite di gas nelle vicinanze.

- Quando si stacca la spina , il blocco può sbloccarsi automaticamente anche se è presente ancora acqua all'interno. Prego, verificare che non ci sia dell'acqua all'interno della lavatrice al fine di evitare perdite inutili.


CE

NOMI DELLE PARTI

Accessori allegati

ISTRUZIONI	TUBO PER L'ACQUA	CHIAVE INGLESE	BLOCCHI PER TRASPORTO
			

NOME DELLE PARTI

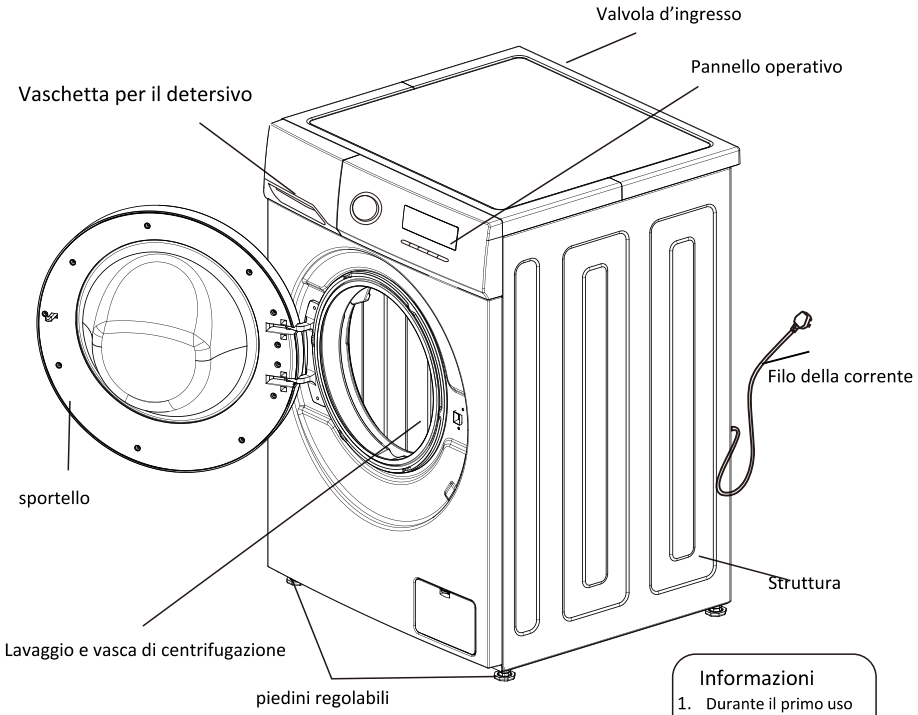

Informazioni

1. Durante il primo uso potrebbe verificarsi una perdita d'acqua dovuta ai test effettuati in precedenza
2. Dopo ogni utilizzo staccare la spina e spegnere il rubinetto al fine di evitare danni.

L'immagine sopra riportata ha lo scopo di mostrare i dettagli, potrebbe differire dall' estetica reale

ISTRUZIONI PER L'INSTALLAZIONE


- Assicurarsi di installare la lavatrice in luoghi con una temperatura superiore a 0°. Installa la lavatrice seguendo gli standard e le regolamentazioni stabilite.
- Mantenere la base della lavatrice ventilata quando è posizionata su un pavimento con la moquette.

Blocchi di sicurezza per il cestello


Le lavatrici hanno installato i blocchi di sicurezza del cestello al fine di prevenire danni durante i trasporti.

Smontaggio dei blocchi di sicurezza per il cestello

1. Al fine di prevenire danni durante il trasporto, ci sono 4 blocchi installati, si prega di rimuoverli prima dell'uso. Se non vengono smontati i blocchi la lavatrice potrà danneggiarsi durante l'uso.
2. Utilizzare la chiave fornita all'interno della lavatrice per allentare i 4 blocchi.
3. Rimuovere i blocchi, ogni qual volta che la lavatrice dovrà essere spostata sarà necessario rimettere i bulloni.
4. Utilizza gli stoppini forniti per sigillare i buchi delle viti

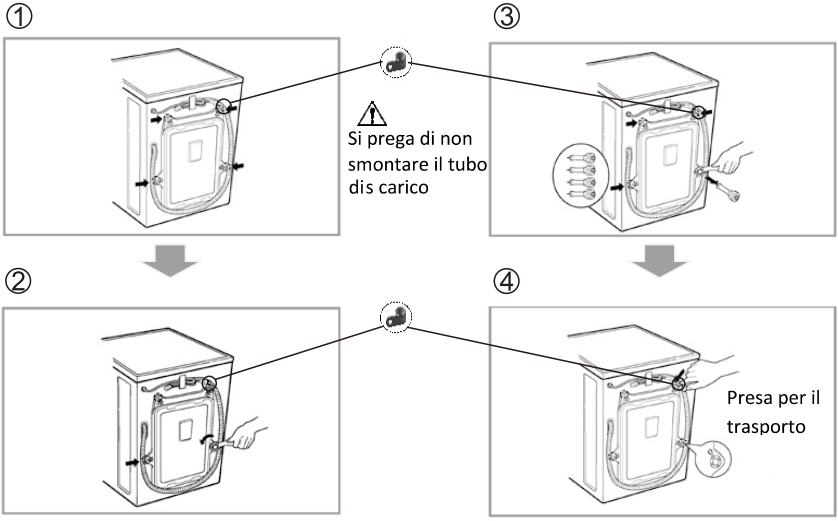

Requisisti per il posizionamento

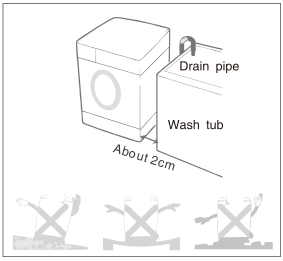

Posizione verticale

- L'angolo di inclinazione deve essere inferiore a 1 grado .

Presa di corrente

- La distanza tra la lavatrice e la presa deve essere non superiore ad 1.5 metri
- Non utilizzare più elettrodomestici nella stessa presa.

Pulizia

- È necessario pulire il muro la porta la parte posteriore.
- Installare la lavatrice su una superficie stabile e dura e non su una superficie instabile , evitare di posizionarla su un pavimento in legno.
- Non posizionare abiti sporchi o altri oggetti sopra la lavatrice potrebbe compromettere il normale funzionamento.

⚠AVVISO!

Alimentazione


1. Non utilizzare le schede di cablaggio o qualcosa di simile
2. Se l'alimentazione risulta danneggiato, contattare immediatamente degli esperti per la riparazione.
3. Dopo aver utilizzato la lavatrice, staccare la spina e spegnere il rubinetto.
4. Connettere la lavatrice con lo scarico a terra .
5. Posizionare la lavatrice in un punto in cui è facile collegare la spina.

- Contattare il centro di manutenzione e richiedi un'assistenza professionale per riparare la lavatrice.
- Non posizionare la lavatrice in posti dove le temperature potrebbero andare sotto zero , i tubi potrebbero ghiacciarsi e di conseguenza rompersi. Inoltre, queste temperature potrebbero danneggiare i programmi.
- Se si sposta la lavatrice in un luogo con temperatura differente rispetto a quello precedente attendere qualche ora prima di utilizzarla.

Messa a terra

- La lavatrice deve essere dotata la messa a terra. In caso si dovesse verificare una scossa elettrica serve a limitare i danni. La spina con messa a terra deve essere inserita in una presa appropriata, se volete assicurarvi che la lavatrice sia correttamente funzionante, contattare degli esperti e non farlo da soli.

Le lavatrici devono essere collegate con ingresso acqua si prega di utilizzare un tubo nuovo piuttosto che uno vecchio. Se trovate dell'acqua presente nella lavatrice è dovuto ai test effettuati in fabbrica per testare la qualità del prodotto.




Connessione per l'acqua

1. La pressione dell'acqua deve essere compresa tra i 30kPa e i 1000 kPa
2. Non rovinare la filettatura quando si collega il tubo con il rubinetto di serie
3. Si prega di prestare attenzione che la pressione dell'acqua non superi i 1000 KpA




- Due guarnizioni sono fornite con il tubo al fine di evitare perdite d'acqua, effettuare un breve controllo prima di collegare il tubo.
- Controllare regolarmente i tubi.
- Assicurarsi che i tubi non siano danneggiati o che i vari condotti non siano ostruiti.

1 Controllare le guarnizioni in gomma su entrambi i lati del tubo.
Inserire una guarnizione di gomma nei raccordi filettati su ogni tubo per evitare perdite.

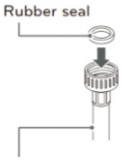


2 Collegare i tubi di alimentazione acqua per i rubinetti di acqua strettamente a mano e poi stringere un altro 2/3 giri con una pinza.
-connettere Il tubo blu al rubinetto dell'acqua.



3 Dopo aver collegato il tubo di ingresso per i rubinetti d'acqua, accendere il rubinetti di acqua per espellere le sostanze estranee (sporcizia, sabbia o segatura) nelle linee d'acqua. Lasciare scarico dell'acqua in un secchio, e controllare la temperatura dell'acqua.



4 Collegare i tubi flessibili per l'ingresso dell'acquaa mano e quindi stringere un altro 2/3 giro con una pinza.





5


- questa lavatrice è pensata per un uso domestico, si prega di non istallarla su navi mezzi da viaggio o aerei.
- Si prega di spegnere il rubinetto se non la si utilizza per molto tempo(ad es. durante le vacanze)
- Si prega di rimuovere la spina e disattivare il bloccaggio della porta al fine di evitare che il bambino/a rimanga bloccato/a all'interno.
- Materiale per l'imballaggio (ad es. pellicola schiuma) potrebbe creare problemi alla sicurezza del bambino ad es. asfissia Attenzione: lasciare qualsiasi materiale per l'imballo al di fuori della portata dei bambini.

Installare il tubo di scarico

- Si prega di fissare correttamente il tubo di scarico.
- Il tubo di scarico dovrebbe restare tra (0.85m – 1.25m) , la parte finale del tubo non deve essere posizionata in acqua.
- Se il tubo di scarico risulta troppo lungo, si prega di non forzare l'inserimento all'interno della lavatrice. Questo causerebbe un rumore anomalo (si prega di controllare nell'immagini seguenti 9

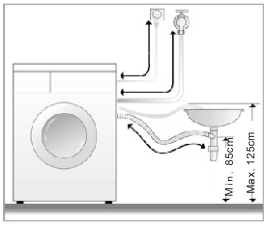

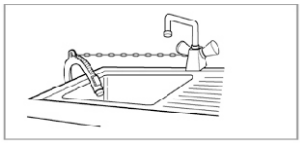

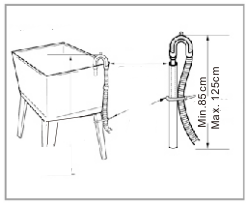


Installazione Orizzontale

- Per evitare rumori e vibrazioni si prega di posizionare la lavatrice in un angolo della stanza.
- Se non è perfettamente in piano, si prega di metterlo in piano. (non posizionare pezzi di legno o qualcosa di simile) , assicurarsi che il livello dei 4 piedini sia uniforme e che la lavatrice sia completamente stabile.



- regolare i piedini di allineamento
- Controllo diagonale
  Applicando forza verso il basso la lavatrice non
  Dovrebbe tremare (in caso è necessario regolare
  Nuovamente i piedini)

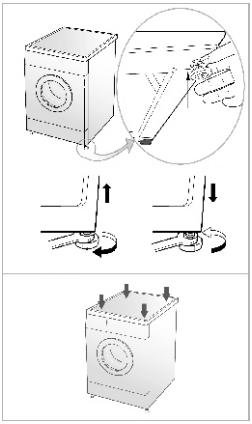

Metodi di chiusura e apertura dello sportello


Bloccaggio porta

- Dopo l'utilizzo lo sportello si bloccherà automaticamente e si accenderà una spia luminosa "DOOR LOCK" sul pannello luminoso.

Disattivazione del bloccaggio dello sportello

- Quando "il bloccaggio porta" è attivo, premere "START/PAUSE", la macchina si fermerà automaticamente. Si prega di attendere circa 2 minuti, il bloccaggio porta sarà rimosso automaticamente.
- Se una volta aperto lo sportello è presente della schiuma si prega di rimuoverla con uno straccio.
- Se la temperatura è troppo alta, non sarà possibile effettuare l'operazione di disattivazione del bloccaggio porta.
- Se il livello dell'acqua è troppo alto, non sarà possibile effettuare l'operazione di disattivazione del bloccaggio porta.

Metodo di utilizzo della vaschetta del detersivo

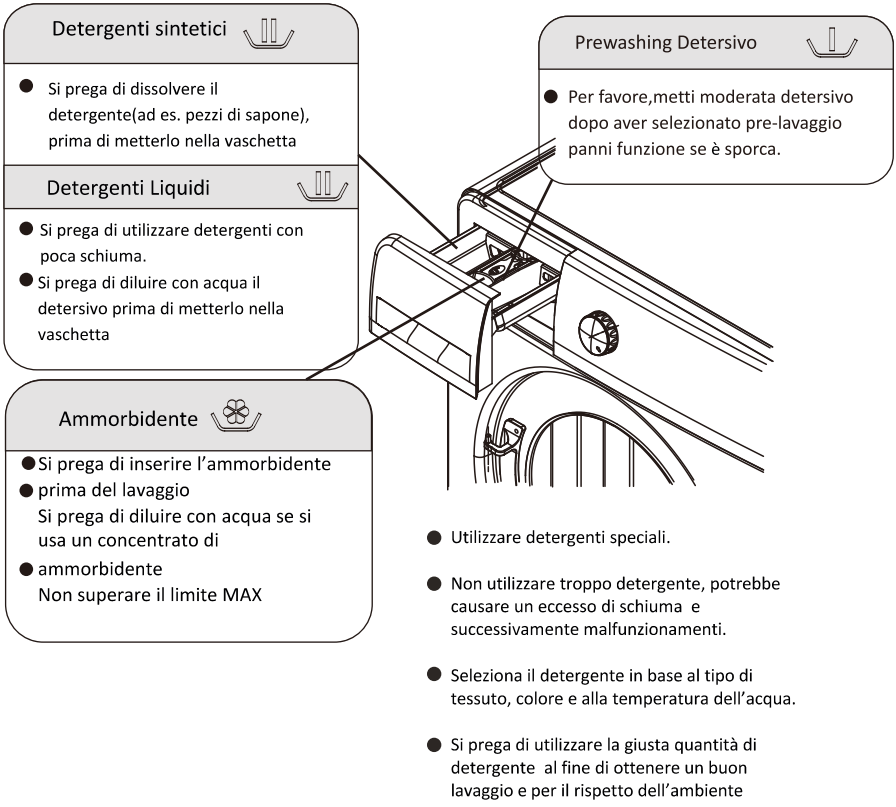


- Utilizzare detergenti speciali.
- Non utilizzare troppo detergente, potrebbe causare un eccesso di schiuma e successivamente malfunzionamenti.
- Seleziona il detergente in base al tipo di tessuto, colore e alla temperatura dell'acqua.
- Si prega di utilizzare la giusta quantità di detergente al fine di ottenere un buon lavaggio e per il rispetto dell'ambiente

Raccomandazioni sull'uso del detersivo a varie temperature

- Quando si lavano i bianchi molto sporchi, si consiglia di utilizzare un lavaggio di 60° o superiore con un detersivo in polvere che contiene agenti sbiancanti che a media/alta temperature fornisce risultati eccellenti.
- Per i lavaggi compresi tra i 40° e i 60°, i tipi di detergenti consigliabili sono: per quando riguarda i "bianchi"e i capi molto sporchi , si consiglia un detersivo in polvere, invece per i "colorati" è consigliabile utilizzare un detersivo liquido.
- Per lavaggi con temperature inferiori a 40° si consiglia l'uso di detergenti liquidi ideali per lavaggi a basse temperature.

Introduzione alle Funzione del Pannello Operativo

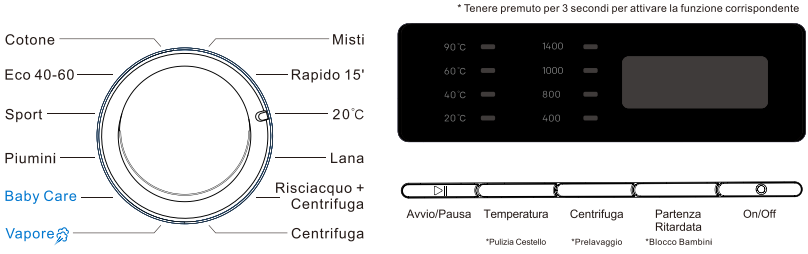

L'immagine qui mostrata è solo indicativa e potrebbe differire dal prodotto effettivo.

1. Tasto On/Off
- Accendere o spegnere l'apparecchio.
- Al termine del programma, premi On/Off per spegnere l'apparecchio.

2. Tasto Ritardo
- Tempo di ritardo
- Il tempo di ritardo si riferisce al periodo precedente all'inizio del programma.

3. Tasto Velocità
- Seleziona la velocità in base alla capacità e alla varietà di indumenti.
- Procedura diversa, intervallo di selezione della velocità diverso, ma la velocità di pulizia del cestello non è una scelta.

4. Tasto Temp.
- Seleziona la temperatura dell'acqua in base alla varietà e al grado di sporcizia.
- Procedura diversa, intervallo di temperatura dell'acqua diverso, alcuni non hanno opzioni.

5. Tasto Avvio/Pausa
- Premi per avviare il programma.
- Premi per mettere in pausa durante il programma, premi di nuovo per riprendere.

6. Tasto Programma
- Seleziona il programma in base alla varietà e alla sporcizia degli indumenti.

7. Pulizia del Cestello
- Per eliminare i residui di sporcizia e completare la sterilizzazione e la disinfezione
- Tieni premuto Temp. per più di 3 secondi per avviare il programma di pulizia del cestello.

8. Tasto Prelavaggio
- Se i panni sono troppo sporchi, è possibile scegliere questo programma prima del lavaggio.
- Tieni premuto Velocità per più di 3 secondi per avviare il programma di prelavaggio.

9. Tasto Blocco Bambini
- Premi per proteggere dall'uso da parte dei bambini.
- Premendo si disattiveranno tutti I tasti eccetto l'interruttore "On/Off".
- Tieni premuto Ritardo per più di 3 secondi per attivare o disattivare la funzione di Blocco bambini.

Introduzione ai programmi e alle funzioni

Funzionamento con indumenti regolari

1. Preparativi
- Apri lo sportello, mettere gli indumenti e richiudi lo sportello.
- Estrai il contenitore del detersivo, aggiungi il detersivo e chiudi il contenitore.
- Collega i tubi di ingresso e accertati che il rubinetto sia aperto.

2. Premi l'interruttore On/Off
3. I programmi possono essere selezionati in base alle esigenze.
4. In base alle esigenze, premi il tasto corrispondente per impostare temperatura dell'acqua, tempi di risciacquo, velocità di centrifuga, tempo di ritardo e modalità di lavaggio.
5. Premere il tasto Avvio/Pausa e inizia il lavaggio.
6. Quando tutte le operazioni sono terminate, il cicalino emetterà un suono.

- Aprire lo sportello per estrarre gli indumenti.
- Scollega e chiudi il rubinetto di arresto.
- Per modificare l'impostazione corrente durante il programma di lavaggio, premi prima il tasto "Avvio/Pausa" e interrompere il lavaggio, quindi premi il tasto per ripristinare.

Programma Cotone
Questo programma è adatto per i vestiti che sono moderatamente o leggermente sporchi, come cotone, lenzuola, biancheria intima, asciugamani e camicie, ecc...

Programma Eco
Per lavare indumenti poco sporchi per risparmiare tempo ed energia.

Programma Sport
Per lavare indumenti sportivi, e rimuovere il sudore e lo sporco dagli indumenti

20°C
Per lavare piccole macchie

Programma Piumino
Per lavare indumenti pesanti, come cappotti, asciugamani grandi e così via.

Programma Baby Care
Per lavare indumenti dei bambini per renderli più puliti.

Programma Vapore
La funzione vapore viene attivata per riscaldare l'ambiente interno del cestello, migliorando le prestazioni di lavaggio e sciogliendo lo sporco.

Programma Mix
Questa funzione può essere utilizzata per lavare capi misti come cotone, sintetici e così via (non lavare capi che si sfilacciano facilmente).

Programma Veloce 15'
Per lavare vestiti che vengono cambiati frequentemente, sottili e non troppo sporchi.

Programma Sintetici
Per lavare capi sintetici

Programma Lana
Per lavare tessuti di lana contrassegnati come "lavabili in lavatrice".

Programma Risciacquo + Centrifuga
La macchina non laverà, solo risciacquerà e centrifugherà.

Programma Centrifuga
La macchina non laverà e risciacquerà, solo centrifugherà.
lDurante il processo di centrifuga, la velocità effettiva di centrifuga potrebbe non combaciare con la velocità selezionata per il programma, in quanto la lavatrice regola la velocità in base all'equilibrio tra i capi.

programmi della lavatrice

Programmi	Temperatura (°C)	Velocità (Giri/Min.)	Tempo (Min.)
Cotone	Freddo (20℃,40℃,60℃,90℃)	1000(0,400,800,1400)	94
Eco 40-60	40℃(Freddo , 20℃,60℃)	1400(0,400,800,1000)	158
Sport	20℃ (Freddo , 40℃)	1000(0,400,800)	83
Piumini	60℃(Freddo , 20℃,40℃ , 90℃)	1400(0,400,800,1000)	125
Baby Care	60℃(40℃ , 90℃)	1000(0,400,800)	130
Vapore	20℃(Freddo , 40 ℃,60℃ , 90℃)	800(0,400,1000,1400)	83
Misti	Freddo (20℃,40℃)	1000(0,400,800)	73
Rapido 15'	Freddo (20℃,40℃)	800(0,400,1000)	15
20℃	20℃	1000(0,400,800,1400)	63
Lana	Freddo (20℃,40℃)	800(0,400,1000)	57
Risciacquo + Centrifuga	—	1000(0,400,800,1400)	38
Centrifuga	—	1000(0,400,800,1400)	14

Note aggiuntive

1. Le tempistiche possono variare a seconda del tipo di lavaggio e tessuto, quantità di esso e temperatura dell'acqua.
2. Il tempo indicato sul display potrebbe presentare differenze rispetto al tempo reale di lavaggio.
3. Se la velocità risulta essere troppo lenta, il lavaggio potrebbe risultare di scarsa qualità, è consigliato aggiungere un ciclo in più di risciacquo.
4. Parametri differenti per differenti modelli.

Il programma ECO 40-60 è solitamente indicato per la pulizia di tessuti in cotone che vengono dichiarati lavabili a 40 °C o 60 °C, nello stesso ciclo di lavaggio., questo programma è conforme alle regole UE relative a questo argomento.
I programmi che permettono di avere una maggiore efficienza energetica solitamente sono quelli con una temperatura dell'acqua minore e una maggiore durata in termini di tempo.
È necessario verificare che La Lavatrice o Lavasciuga non superi il carico massimo consentito cosi da avere un maggior risparmio energetico e un minor spreco d'acqua.
La lavatrice potrebbe risultare rumorosa in fase di centrifugazione, se risulta rumorosa anche a basse velocità potrebbe significare la presenza di oggetti nel cestello.
Tutte le informazioni relative al prodotto è possibile trovarle Online come da regolamentazione UE, attraverso il codice prodotto.
Puoi verificare tutte le informazioni relative alle Energy Lable scansionando il QR code presente su di esse.

Manutenzione

- Si prega di tenere sotto controllo la lavatrice al fine di aumentare la vita stessa del prodotto.
- Prima della manutenzione, si prega di staccare la spina.

Corpo della lavatrice

Prima di effettuare il lavaggio, si prega di pulire delicatamente con uno straccio. Al fine di evitare possibili contaminazioni.


- Non bagnare direttamente
- Non utilizzare benzina, alcohol per pulire la lavatrice.

Guarnizione dello sportello

Prima di effettuare il lavaggio, rimuovere contaminazioni e sporco o altre forme di sporco.

Per la pulizia della vaschetta del detersivo

Si prega di pulire regolarmente la vaschetta per il detersivo. Tirarla fuori e lavarla con acqua pulita.

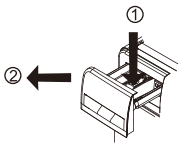


1. Spingere in basso
2. Estrarre

La pulizia dell'attacco universale (consigliata: una volta ogni sei mesi)


- Se lo sporco accumulato, potrebbe influenzare la velocità e il flusso d'acqua .

1. Tira fuori il tubo morbido dall'attacco universale .
2. Spegnere il dispositivo secondo la freccia
3. Pulire la parte interna del tubo.
4. Installare di nuovo il tubo.



La pulizia della valvola dell'acqua (consigliata: una volta ogni sei mesi)


1. Staccare il tubo dalla parte della lavatrice.
2. Estrarre il filtro a rete dalla valvola dell'acqua.
3. Pulire il filtro a rete.
4. Rimettere il tubo di ingresso.

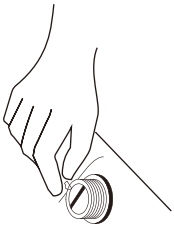

Manutenzione

Quando la lavatrice è ghiacciata

1. Coprire il rubinetto e i tubi con uno straccio caldo.
2. Mettere il tubo di immissione in un recipiente con l'acqua a 50 gradi.
3. Mettere 2-3 Lt. Di acqua a 50 gradi nel cestello.
4. Collegare tutto e iniziare il lavaggio.

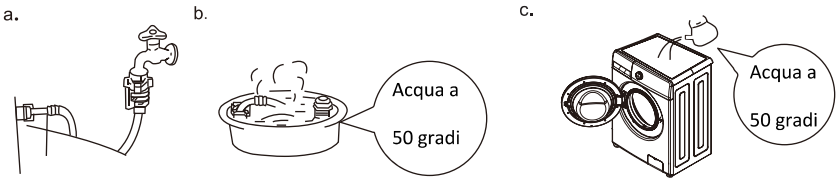

Pulizia della pompa e del filtro di scarico (suggerito: una volta al mese)

1. Dopo lo scarico, spegnere e aprire il coperchio del filtro. (attenzione: se l'acqua all'interno è ancora calda, si prega di attendere che si raffreddi)
2. Estrarre il filtro in senso antiorario.
3. Pulire il filtro
4. Reinserire il filtro e girare in senso orario.

Attenzione: a. si prega di stringere il filtro accuratamente al fine di evitare perdite.
b. si prega di non pulire durante il funzionamento.

La pulizia del cestello (suggerita: una volta la mese)

Dopo qualche utilizzo, potrebbe accumularsi un po' di sporco. Si può effettuare sia la pulizia interna si la pulizia esterna.

Attenzione: si prega di non mettere indumenti o detersivi durante la pulizia del cestello.

Avvertenze prima del lavaggio

1. Guida per il lavaggio


- Si prega di controllare la guida del lavaggio, dove vengono mostrati i metodi e le tipologie di tessuti da lavare.

2. Classificazione del lavaggio

- Si prega di lavare i vestiti delle stesse categorie senza mischiarli, in base anche al tipo di tessuto, alla temperatura e alla durata del lavaggio. Si prega di non lavare vestiti molto sporchi assieme a vestiti poco sporchi.
- Grado di sporcizia (grave, moderato, lieve) — Classifica e lava i prodotti in base al grado
- Colori(Bianchi, colorati, colori scuri) — classifica e lava
- Vellutati (facile da rispettare) — classifica il bianco e gli scuri

3. Note

- Quando vengono messi sia indumenti grandi sia indumenti piccoli, mettere prima quelli grandi e lasciare almeno la metà di cestello libera. Si prega di non lavare un indumento singolo perché potrebbe causare degli squilibri. Si prega di aggiungere come minimo 2 o più indumenti possibilmente delle stesso tipo.
- Piccoli indumenti come calze di seta o fazzoletti devo essere messi nell' apposito sacchetto per il lavaggio, prima di lavare un reggiseno si prega di rimuovere i ferretti, se non è possibile rimuovere i ferretti si prega di inserire il tutto nella borsa per il lavaggio assieme a calze e fazzoletti.
- Controllare le tasche e verificare che non ci siano chiodi, chiavi , monete, penne e altri piccoli oggetti
- Tirare su la zip a tutti i pantaloni, al fine di evitare che danneggi altri vestiti.
- Si prega di lavare con acqua e poco detersivo le parti troppo sporche prima di mettere in lavatrice
- Controllare le guarnizioni della porta e assicurarsi che non ci sia nulla in mezzo.

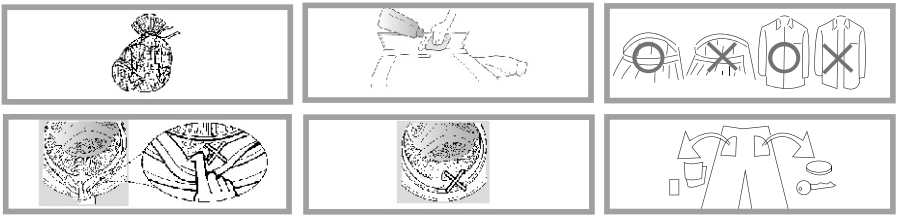

Assenza di malfunzionamenti

Lo sportello non si apre	• I programmi sono in funzione • Ci sono degli indumenti tra lo sportello e le guarnizioni
C'è un odore	• Ci può essere un odore di gomme perché molti componenti sono fatti di gomma.
C'è troppa poca acqua durante il lavaggio	• La lavatrice ha bisogno di più acqua durante il funzionamento
Non c'è acqua nel flusso di carico	• Il rubinetto è acceso? • Il tubo di immissione è congelato? • Ci sono dei filtri bloccati?
Afflusso d'acqua a metà	• Se il flusso d'acqua diminuisce, la lavatrice ristabilizzerà il livello dell'acqua automaticamente.
L'acqua viene scaricata durante il lavaggio	• Controlla che non ci sia troppo detersivo con molta schiuma.
Tempo rimanente	• Se i vestiti non sono ben posizionati , il tempo di centrifuga sarà allungato verso la corretta deviazione.
C'è un rumore strano durante la centrifuga	• Controlla se il filo tocca con la cabina della lavatrice. • I bulloni per il trasporto sono stati smontati? • Ci sono delle monete o mollette nel cestello?
La lavatrice non funziona dopo che è saltata la corrente	• La lavatrice si stopperà dopo che la corrente è saltata, una volta riavviata la corrente, se deve entrare in funzione nuovamente. Si prega di premere il pulsante di avvio e resettare i programmi

Guida alla risoluzione dei problemi

	Controllo	Soluzione
La lavatrice non funziona	• Controlla il pulsante di avvio o il pulsante avvio/pausa • La spina non è inserita? • È saltata la corrente? • Controllare se sono presenti delle perdite	Premere il pulsante di avvio/pausa . Connettere la spina. Attendere qualche istante. Apri la protezione per le perdite
Problema con la centrifuga sullo schermo appare "UE"	• Controlla se i bulloni sono smontati • La lavatrice è stabilmente posizionata? • Ci sono vestiti troppo piccoli? • I piedini della lavatrice sono disallineati?	Smonta i bulloni del trasporto. Posizionare la lavatrice sopra una superficie stabile. Aggiungere degli indumenti Risistemare i piedini della lavatrice
Entrata acqua su display appare "IE"	• Controllare che il rubinetto si aperto • C'è poca acqua o la pressione dell'acqua non è sufficiente? • Ci sono i tubi dell'acqua ghiacciati? • I filtri sono bloccati?	Aprire il rubinetto. Attendere prego. Utilizza dell'acqua calda per scongelare i tubi. estrarre i filtri e pulirli.
Uscita acqua sul display appare "OE"	• L'uscita dei tubi è posizionata troppo in alto? • L'uscita dei tubi e congelata? • L'uscita dei tubi è congelata? • Lo scarico a pavimento è bloccato?	Prego, spostare il tubo e assicurati che l'altezza massima sia compresa tra 1M Utilizza acqua calda per scongelare i tubi. Pulisci lo scarico a pavimento
Indicatore porta mostra "DE"	• Assicurati che prima di azionare la lavatrice lo sportello sia correttamente chiuso	Assicurarsi che la porta sia correttamente chiusa
Indicatore riscaldamento mostra "ŁE"	Si prega di staccare la spina e chiamare il servizio assistenza	
Indicatore di entrata di acqua continua su schermo appare "FE"	Chiudere il rubinetto, staccare la spina e chiamare il servizio di assistenza	
Il display mostra "LE" o "CE" quando il cestello non ruota	Chiudere il rubinetto, staccare la spina e chiamare il servizio di assistenza	
C'è troppa schiuma	• Controlla che non ci sia troppo detersivo?	Aggiungi una quantità ragionevole di detersivo. Utilizza il detersivo corretto.

funzioni varie

Funzioni	Descrizione	
Blocco per bambini	Impostazioni	Al fine di evitare che i bambini giochino
	Impostazione di rimozione	Durante le operazioni, premere Partenza Ritardata per più di tre secondi, staccare la spina e ripetere l'operazione per sbloccare il blocco
Rimozione del blocco	Impostazioni	Una volta terminate le operazioni, se è Ancora presente dell'acqua,attendere che il livello dell'acqua scenda.
Spegnimento	Impostazioni	Quando l'alimentazione è collegata durante lo spegnimento, il tempo continuerà dal tempo in cui è stato stoppato
Bloccaggio automatico della porta	Impostazioni	Dopo aver selezionato le procedure, 2 minuti dopo la fine delle operazioni lo sportello si sbloccherà automaticamente
Pulizia del cestello	Impostazioni	Al fine di rimuovere germi e batteri si prega di pulire il cestello
	Impostazione di rimozione	Premere Temperatura per più di 3 secondi
Ritardi	Impostazioni	Premere ritarda per selezionare il tempo di lavaggio, il display mostra 24 ore con 24 differenti livelli

Specifiche

Model	AQUA8051AS	AQUA9060AS	AQUA1060AS
Capacita di lavaggio	8.0kg	9.0kg	10.0kg
Capacità di centrifuga	8.0kg	9.0kg	10.0kg
Voltaggio	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz
Potenza di lavaggio	350W	200W	200W
Potenza di centrifuga	700W	600W	500W
Potenza tecnica nominale	1600W	2000W	1800W
Potenza massima	1750W	2200W	1950W

Scheda prodotto

Nome Fornitore:

Indirizzo fornitore:

Modello identificativo: AQUA8051AS

Parametri Generali del prodotto

Parametri	Valori		Parametri	Valori	
Capacità di carico (Kg)	8.0		Dimensioni in (Cm)	**Altezza**	85
				Larghezza	60
				Profondità	51
EE1w (*)	52.0		Classe Energetica (*)	A	
Indice di efficienza lavaggio (*)	1.031		Efficacia massima di lavaggio (*) (Kg)	5.0	
Consumo energetico basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	0.473		Consumo Acqua basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	37	
temperatura massima all'interno del tessuto trattato	**Completo**	33	Residuo umidità (*) (%)	53.9	
	Metà	28			
	¼	23			
Velocità (*) (rpm)	**Completo**	1400	Efficienza energetica centrifuga (*)	B	
	Metà	1400			
	¼	1400			
Durata programmi (*) (h:min)	**Completo**	3:38	Tipologia	Libera Installazione	
	Metà	2:50			
	¼	2:50			
Livello Sonoro (*) (dB(A) re 1 pW)	76		Classe Emissione Rumore (*) (Centrifuga)	B	
Off-Mode	0.52		Stand By	N/A	
Partenza ritardata (W) (Se disponibile)	4.00			N/A	

Durata minima della garanzia offerta dal fornitore (**):

(*) Per programmi 40-60

(**) Riferimento paragrafo 4, articolo 4 del regolamento EU 201/1369

Informazioni aggiuntive per uso domestico della Lavatrice

Parametri	Unità	Valore
Capacità nominale per programma ECO 40-6, intervallo 0,5 Kg. C	Kg.	8.0
Consumo Energetico con programma ECO 40-60 / Pieno Carico	KWh. / Cicli	0.747
Consumo Energetico con programma ECO 40-60 / Mezzo	KWh. / Cicli	0.425
Consumo Energetico con programma ECO 40-60 / 1/4	KWh. / Cicli	0.214
Consumo energetico ponderato ECO 40-60	KWh. / Cicli	0.473
Consumo Energetico standard programma ECO 40-60	KWh. / Cicli	0.909
Indice di efficienza energetica (EEI)	---	52.0
Consumo acqua con programma ECO /Pieno Carico	L / Cicli	50.0
Consumo acqua con programma ECO /Mezzo	L / Cicli	35.0
Consumo acqua con programma ECO / 1/4	L / Cicli	25.0
Consumo acqua ponderato	L / Cicli	37
Indice di efficienza energetica con programma ECO 40-60 / Pieno carico	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / Mezzo	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / 1/4	---	1.031
Efficacia risciacquo programma ECO 40-60 / Pieno carico	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / Mezzo	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / 1/4	g/Kg.	5.0
Durata programma ECO 40-60 / Pieno Carico	h:Min	3:38
Durata programma ECO 40-60 / Mezzo	h:Min	2:50
Durata programma ECO 40-60 / 1/4	h:Min	2:50
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Pieno Carico	°C	33
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Mezzo	°C	28
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / 1/4	°C	23
Velocità cestello con programma ECO 40-60 / Pieno carico	rpm	1400
Velocità cestello con programma ECO 40-60 / Mezzo	rpm	1400
Velocità cestello con programma ECO 40-60 / 1/4	rpm	1400
Livello umidità rimanente (D)	%	53.9
Livello sonoro durante programma ECO 40-60 (Centrifuga)		76
Consumo Energetico modalità “Spento”	W	0.52
Consumo energetico modalità standby	W	N/A
Visualizzazione informazioni Display durante “StandBy”	--	NO
Consumo energetico in standBy (Con rete elettrica non disponibile)	W	N/A
Consumo energetico per funzione “Partenza ritardata” (Se disponibile)	W	4.00

Scheda prodotto

Nome Fornitore:

Indirizzo fornitore:

Modello identificativo: AQUA9060AS

Parametri Generali del prodotto

Parametri	Valori		Parametri	Valori	
Capacità di carico (Kg)	9.0		Dimensioni in (Cm)	**Altezza**	85
				Larghezza	60
				Profondità	60
EE1w (*)	51.9		Classe Energetica (*)	A	
Indice di efficienza lavaggio (*)	1.031		Efficacia massima di lavaggio (*) (Kg)	5.0	
Consumo energetico basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	0.494		Consumo Acqua basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	45	
temperatura massima all'interno del tessuto trattato	**Completo**	30	Residuo umidità (*) (%)	53.9	
	Metà	29			
	¼	21			
Velocità (*) (rpm)	**Completo**	1400	Efficienza energetica centrifuga (*)	B	
	Metà	1400			
	¼	1400			
Durata programmi (*) (h:min)	**Completo**	3:48	Tipologia	Libera Installazione	
	Metà	2:54			
	¼	2:54			
Livello Sonoro (*) (dB(A) re 1 pW)	76		Classe Emissione Rumore (*) (Centrifuga)	B	
Off-Mode	0.50		Stand By	N/A	
Partenza ritardata (W) (Se disponibile)	4.00			N/A	

Durata minima della garanzia offerta dal fornitore (**):

(*) Per programmi 40-60

(**) Riferimento paragrafo 4, articolo 4 del regolamento EU 201/1369

Informazioni aggiuntive per uso domestico della Lavatrice

Parametri	Unità	Valore
Capacità nominale per programma ECO 40-6, intervallo 0,5 Kg. C	Kg.	9.0
Consumo Energetico con programma ECO 40-60 / Pieno Carico	KWh. / Cicli	0.794
Consumo Energetico con programma ECO 40-60 / Mezzo	KWh. / Cicli	0.494
Consumo Energetico con programma ECO 40-60 / 1/4	KWh. / Cicli	0.240
Consumo energetico ponderato ECO 40-60	KWh. / Cicli	0.494
Consumo Energetico standard programma ECO 40-60	KWh. / Cicli	0.951
Indice di efficienza energetica (EEI)	---	51.9
Consumo acqua con programma ECO /Pieno Carico	L / Cicli	60.0
Consumo acqua con programma ECO /Mezzo	L / Cicli	40.0
Consumo acqua con programma ECO / 1/4	L / Cicli	35.0
Consumo acqua ponderato	L / Cicli	45
Indice di efficienza energetica con programma ECO 40-60 / Pieno carico	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / Mezzo	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / 1/4	---	1.031
Efficacia risciacquo programma ECO 40-60 / Pieno carico	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / Mezzo	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / 1/4	g/Kg.	5.0
Durata programma ECO 40-60 / Pieno Carico	h:Min	3:48
Durata programma ECO 40-60 / Mezzo	h:Min	2:54
Durata programma ECO 40-60 / 1/4	h:Min	2:54
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Pieno Carico	°C	30
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Mezzo	°C	29
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / 1/4	°C	21
Velocità cestello con programma ECO 40-60 / Pieno carico	rpm	1400
Velocità cestello con programma ECO 40-60 / Mezzo	rpm	1400
Velocità cestello con programma ECO 40-60 / 1/4	rpm	1400
Livello umidità rimanente (D)	%	53.9
Livello sonoro durante programma ECO 40-60 (Centrifuga)	dB(A)re l pW	76
Consumo Energetico modalità “Spento”	W	0.50
Consumo energetico modalità standby	W	N/A
Visualizzazione informazioni Display durante “StandBy”	--	NO
Consumo energetico in standBy (Con rete elettrica non disponibile)	W	N/A
Consumo energetico per funzione “Partenza ritardata” (Se disponibile)	W	4.00

Scheda prodotto

Nome Fornitore:

Indirizzo fornitore:

Modello identificativo: AQUA1060AS

Parametri Generali del prodotto

Parametri	Valori		Parametri	Valori	
Capacità di carico (Kg)	10.0		Dimensioni in (Cm)	**Altezza**	85
				Larghezza	60
				Profondità	60
EE1w (*)	52.0		Classe Energetica (*)	A	
Indice di efficienza lavaggio (*)	1.031		Efficacia massima di lavaggio (*) (Kg)	5.0	
Consumo energetico basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	0.514		Consumo Acqua basato sul lavaggio ECO 40-60. Il consumo può variare in base al tipo di utilizzo che viene fatto del prodotto.	51	
temperatura massima all'interno del tessuto trattato	**Completo**	33	Residuo umidità (*) (%)	53.9	
	Metà	29			
	¼	20			
Velocità (*) (rpm)	**Completo**	1400	Efficienza energetica centrifuga (*)	B	
	Metà	1400			
	¼	1400			
Durata programmi (*) (h:min)	**Completo**	3:59	Tipologia	Libera Installazione	
	Metà	3:00			
	¼	3:00			
Livello Sonoro (*) (dB(A) re 1 pW)	76		Classe Emissione Rumore (*) (Centrifuga)	B	
Off-Mode	0.50		Stand By	N/A	
Partenza ritardata (W) (Se disponibile)	4.00			N/A	

Durata minima della garanzia offerta dal fornitore (**):

(*) Per programmi 40-60

(**) Riferimento paragrafo 4, articolo 4 del regolamento EU 201/1369


Informazioni aggiuntive per uso domestico della Lavatrice

Parametri	Unità	Valore
Capacità nominale per programma ECO 40-6, intervallo 0,5 Kg. C	Kg.	10.0
Consumo Energetico con programma ECO 40-60 / Pieno Carico	KWh. / Cicli	0.900
Consumo Energetico con programma ECO 40-60 / Mezzo	KWh. / Cicli	0.535
Consumo Energetico con programma ECO 40-60 / 1/4	KWh. / Cicli	0.245
Consumo energetico ponderato ECO 40-60	KWh. / Cicli	0.514
Consumo Energetico standard programma ECO 40-60	KWh. / Cicli	0.988
Indice di efficienza energetica (EEI)	---	52.0
Consumo acqua con programma ECO /Pieno Carico	L / Cicli	65.0
Consumo acqua con programma ECO /Mezzo	L / Cicli	55.0
Consumo acqua con programma ECO / 1/4	L / Cicli	40.0
Consumo acqua ponderato	L / Cicli	51
Indice di efficienza energetica con programma ECO 40-60 / Pieno carico	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / Mezzo	---	1.031
Indice di efficienza energetica con programma ECO 40-60 / 1/4	---	1.031
Efficacia risciacquo programma ECO 40-60 / Pieno carico	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / Mezzo	g/Kg.	5.0
Efficacia risciacquo programma ECO 40-60 / 1/4	g/Kg.	5.0
Durata programma ECO 40-60 / Pieno Carico	h:Min	3:59
Durata programma ECO 40-60 / Mezzo	h:Min	3:00
Durata programma ECO 40-60 / 1/4	h:Min	3:00
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Pieno Carico	°C	33
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / Mezzo	°C	29
Temperatura raggiunta per almeno 5 min. durante lavaggio ECO 40-60 / 1/4	°C	20
Velocità cestello con programma ECO 40-60 / Pieno carico	rpm	1400
Velocità cestello con programma ECO 40-60 / Mezzo	rpm	1400
Velocità cestello con programma ECO 40-60 / 1/4	rpm	1400
Livello umidità rimanente (D)	%	53.9
Livello sonoro durante programma ECO 40-60 (Centrifuga)		76
Consumo Energetico modalità “Spento”	W	0.50
Consumo energetico modalità standby	W	N/A
Visualizzazione informazioni Display durante “StandBy”	--	NO
Consumo energetico in standBy (Con rete elettrica non disponibile)	W	N/A
Consumo energetico per funzione “Partenza ritardata” (Se disponibile)	W	4.00

Spiegazioni dei simboli

V	Volt	~	Corrente alternata
W	Watt	**Hz**	Hertz
SGS GS Geprüfte Sicherheit	Marchi dei test di sicurezza	CE	Marchio CE

Electric diagram

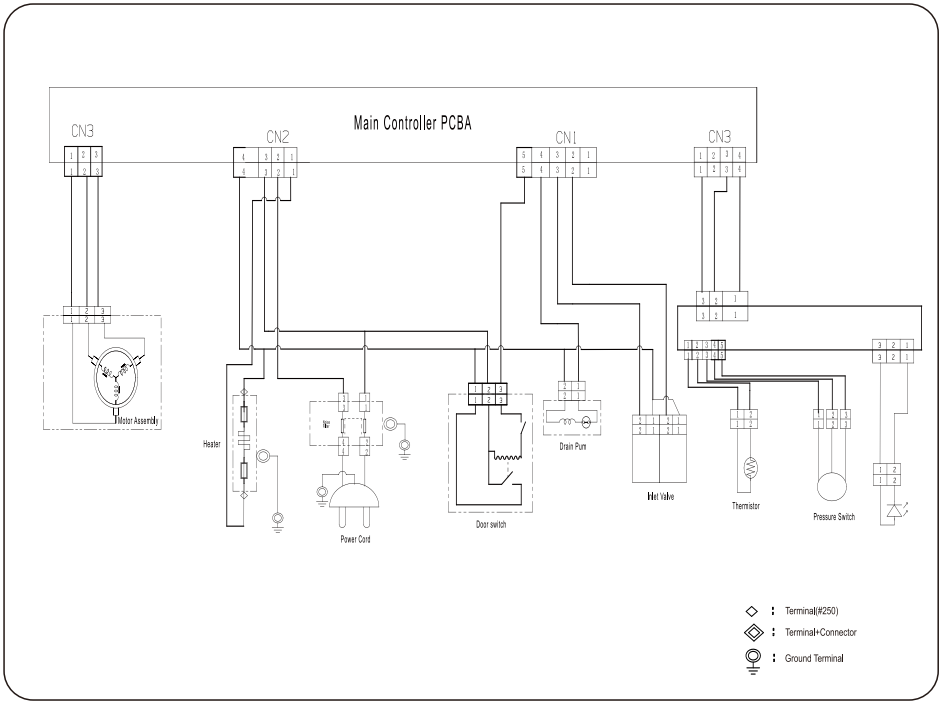


Protezioni Ambientali

Questo marchio indica che questo prodotto non deve essere smaltito con altri rifiuti domestici in tutta l'UE. Riciclare questo prodotto in maniera responsabile al fine di favorire il riutilizzo sostenibile delle risorse materiali, senza causare danni ad ambiente o persone. In caso di smaltimento, rivolgersi a personale autorizzato e/o competente o rivolgersi direttamente al produttore.



Specification and feature are subject to change without prior notice for purpose of product improvement .

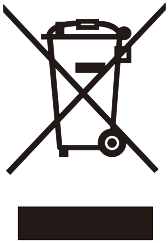

INFORMAZIONI AGLI UTENTI

ai sensi del Decreto Legislativo N° 49 del 14 Marzo 2014

"Attuazione della Direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)"

Il simbolo del cassonetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti. L'utente dovrà, pertanto, conferire l'apparecchiatura integra dei componenti essenziali giunta a fine vita agli idonei centri di raccolta differenziata dei rifiuti elettronici ed elettrotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di nuova apparecchiatura di tipo equivalente, in ragione di uno a uno, oppure 1 a zero per le apparecchiature aventi lato maggiore inferiore a 25 cm. L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dimessa al riciclaggio, al trattamento e allo smaltimento ambientale compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura. Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative di cui al D.Lgs n. Decreto Legislativo N° 49 del 14 Marzo 2014.

LVD no.:GZES1505005253HS
EMC no.:GZEM111000395108/GZEM111000395108V
ERP no.: GZES1407008250HS
REACH no.: CANEC1404704601
Barni Carlo Spa , via Arconate n. 63 20038 Busto Garolfo (Milano)
Made in China

In relazione alla nuova etichetta energetica regolamento EU 2019/2014, 2019/2023 è possibile scaricare il manuale di istruzioni aggiornato al sito www.barni.it

AKAI

User Manual

Front Loading Washing Machine

Model：AQUA8051AS
AQUA9060AS
AQUA1060AS



Grazie per aver scelto la nostra lavatrice.
La preghiamo di leggere attentamente le istruzioni presenti in questo manuale prima di installare ed utilizzare la lavatrice per la prima volta.

Content

Safety Notifications ---------- 3
Part Name ---------- 4
Installation Instruction ---------- 5
Methods of Door Lock and Remove ---------- 10
The Usage Method of the Detergent Box ---------- 10
Function Introduction of Operating Panel ---------- 11
The Introduction of Function and Program ---------- 12
The Introduction of Washing Programs ---------- 16
Maintenance ---------- 18
Varieties of Functions ---------- 19
Notice before Washing ---------- 19
Non-fault Conditions ---------- 21
Troubleshooting Guide ---------- 22
Specification ---------- 22

⚠WARNING

- This appliance is not intended for use by persons(including children)with reduced physical，sensory or mental capabilities,or lack of experience and knowledge, unless they hare been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.Cleaning and user maintenance shall not be made by children without supervision. Children of less than 3 years should be kept away unless continuously supervised.

- If the supply cord is damaged. it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels , motels and other residential type environments;
  - bed and breakfast type environments;
  - areas for communal use in blocks of flats or in launderettes.

- Manual loss , Call our service number.

- Water pressure:0.03-1Mpa.

- **CAUTION**: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

Safety Notifications (Please Must Follow)

● **In order to prevent the harm or damage to the user or the person and property of others, please make sure to follow the safety issues.**

⚠ Warnings

● The risk of electric shock.

1.Please use 220V~240V, above 10A with ground wire dedicated socket.
2.When inserting and pulling out the power cord please use the plug, please. Don't use the damaged power cord. When the power cord pin is dirty please wipe clean with dry cloth in time.
3.Do not use the wet hand to insert or pull out the plug.
4.Please pull out the plug when finishing, repairing or cleaning.

● The danger of fire and current leakage

1.Do not allow the washing machine close to the fire, or lighted cigarettes, candles and volatile materials.
2.Please do not sprinkle the water on the control panel of washing machine.
3.Please do not put the washing machine in the place of wet and outside place.
4.Please fix the drain pump and make sure the sewer unobstructed.

● The danger of high temperature

1.When washing in high temperature, the door glass will be heating. Please do not touch the door glass, especially children.
2.When opening the door after high temperature washing, please wait for the temperature cooled down to a safe level and the door will unlocked automatically.

● The danger of getting hurt

1.Please handle the carton box after removing, don't let the children touch or eat.
2.Do not allow the children to operate or climb up to the washing machine.
3.Please close the door after use to avoid the children enter into the drum.

● The danger of injury

1.Do not put any heavy things on the top of the washing machine.
2.If you want to move the machine, please remember ask for help.
3.Please do not ask unprofessional people to repair the machine.

● The danger of damage the cloths

1.Please do not wash the cloths which is waterproof, like Raincoat, feather products, sleeping bags
2.Please wash the cloths which can be washed, if you have any doubt, please following the instructions.

● The danger of explosion



1.Please do not washing the cloths which stained with kerosene, gasoline, thinner, inflammable goods.
2.Please do not washing when gas leakage.

● When pull out the plug, the lock can be unlock even if there is lot of water inside. So please check the water level inside before unlock the door in order to avoid the unnecessary loss.


CE

Part name

Attachment specification

user manual	water supply hose	wrench	transportation bolt caps
			

Part name

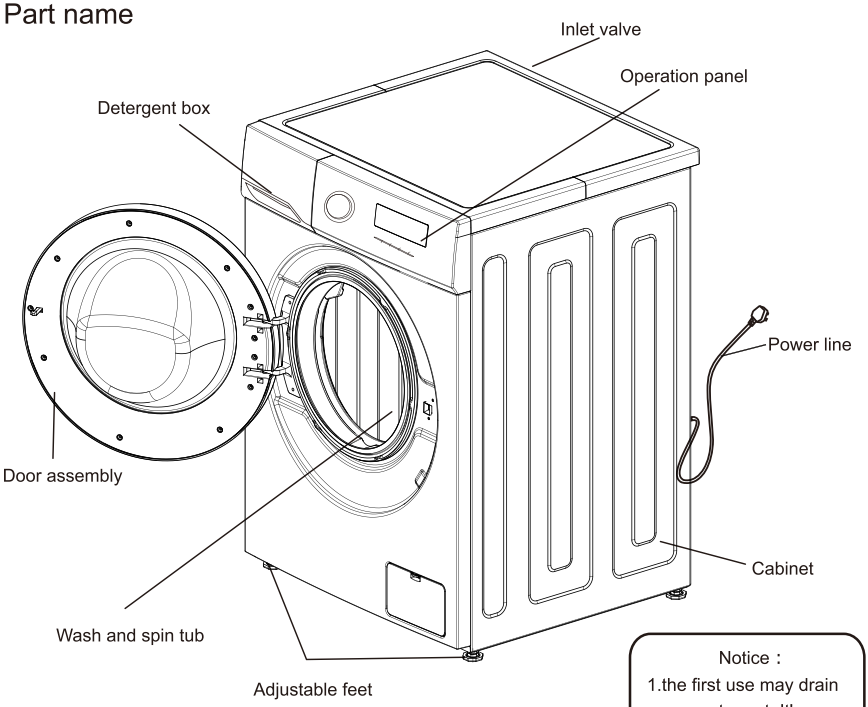

The above picture is just for refference,the detailed information should be based on the real product !

Notice：
1.the first use may drain some water out. It's residual water after performance test, belong to the normal phenomenon.
2.After each use, please pull the plug and turn off the faucet to prevent accidental flood or fire.

Installation instruction

- Make sure the temperature of the places where the washer is installed or placed above 0℃ or put it outside.
- Place the washer correctly according to management standards and regulations.
- Keep the base of washer ventilated when it is placed on the ground with carpet.
- There are too much pests in villages. Please keep the surroundings clean because any damages caused by cockroaches or other pests don't belong to warranty.

Transportation bolt

Washers are installed with transport bolt to prevent internal damage in transit.

Dismantle the transportation bolt

1.In order to prevent internal damage in transit, 4 bolts are installed. Before using the washer, dismantle the bolt.(see chart I)


- If the bolts are not dismantled, violent vibration, noise and trouble will be caused.

2.Use the attached wrench to loosen the 4 bolts. (see chart 2)


3.Twist the bolt rubber slightly and then pull out the bolts, keep the bolts and wrench as standby.(see chart 3)

- The bolts should be remounted no matter when to transport the washer.

4.Use attached stopples to seal the screw holes. (see chart 4)

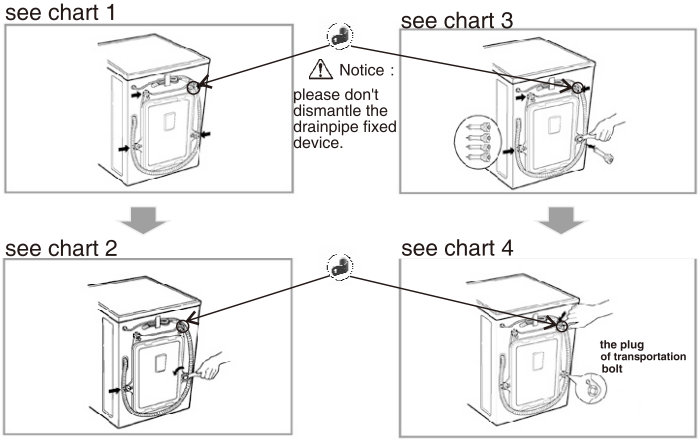

Requires for positions

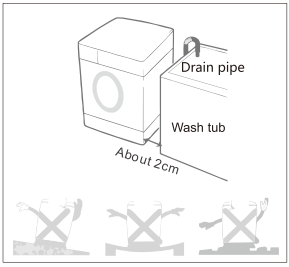

Horizontal adjustment:

- The slant angle should be less than 1 degree.

Power outlet

- The distance between any side of washer and power outlet should be within 1.5 meters.
- Don't use too many electrical appliances in one outlet.

Environment cleaning

- It's necessary to clean the wall, door and ground.
- Install the washer on a hard and steady ground with floor drain rather than soft blanket or wooden floor.
- Don't put dirty clothes or some other goods on a washer's head cover, otherwise it may impact the normal operation.

⚠ Notice

Power connection

1.Don't use the wiring board or something like that.
2.If the power lines are damaged, please contact professionals to repair.
3.After the use of washer, pull the plug and turn the tap off.
4.Connect the washer with grounded outlet to correspond to the wiring principles.
5.Place the washer in which is easy to connect the outlet.


- Contact the maintenance center and ask professionals to repair the washer. Laypeople may cause damages and troubles on the washer.
- Don't put the washer in the place where the temperature is below zero. The pipes will be frozen and break. Moreover, the temperature below zero will damage the programming controller.
- If move the washer in an environment whose temperature is below zero, please keep the washer at room temperature for a few hours before starting it.

Grounding introduction

- A washer must have the grounding devices. If a trouble happens, the device can reduce the risk of electrical shock. The device is equipped with a cable (including a wire and a grounded plug). The grounded plug must be inserted in an appropriate outlet. If you want to know if the washer is grounded correctly, please contact with professional maintenance staff. If the plug can't match with the outlet, please don't change the plug by yourself.
- Once your washer smokes or emits an odor, please cur the power and contact with professional maintenance staff.

Washers should be connected with water inlet. Please use attached new plumbing rather than the old.
In order to ensure the quality, water injection tests are carried out before the washer leaves factory, so there may be water inside the internal tub, door seals and door panel, which are normal.

Water inlet connection

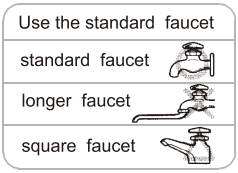


1.The pressure of supply water should be between 30kPa and 1000kPa.
2.Don't abrade the screw thread when connect the inlet pipes with valves.
3.Please install dropping equipment if the pressure of supply water surpasses 1000kPa.



- Two seals are supplied in the connectors of both ends of the pipe to prevent water leaking.
- Turn on the tap and check if the connectors leak.
- Check the pipes regularly. Please change them if necessary.
- Make sure the pipes don't be damaged or twine with each other.

The connection of inlet pipes and taps

1 Check the rubber seals on both sides of the hose. Insert a rubber seal into the threaded fittings on each hose to prevent leaking.

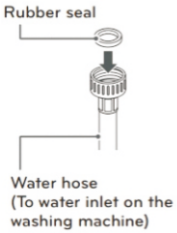

2 Connect the water supply hoses to the water faucets tightly by hand and then tighten another 2/3 turn with pliers.
-Connect the blue hose to water faucet.




⚠ WARNING
- **Do not overtighten.** Damage to the coupling can result.

3 After connecting inlet hose to water faucets, turn on the water faucets to flush out foreign substances (dirt, sand or sawdust) in the water lines. Let water drain into a bucket, and check the water temperature.



4 Connect the hoses to the water inlet tightly by hand and then tighten another 2/3 turn with pliers.




⚠ WARNING
- **Do not overtighten the hoses.** Overtightening can damage the valves resulting in leaking and property damage.

5 Check for leaks by turning on the faucets. If water leaks, check steps 1 to 4 again.

- Such washing machine is designed for home appliances, please do not install it on ship,traveling truck or plane.
- Please turn off the stopcock if long time out of use. (e.g vacation)
- Please remove plug and cancel door lock function to avoid child locking himself/herself inside.
- Packing materials(e.g film, foam) could harm child's safety and cause asphyxia! Attention: MAKE ALL PACKING MATERIEALS OUT OF CHILD REACH.

Install drain-pipe

- Please fix the drain-pipe by a lifting rope.
- For the sake of lightening damage or ground leakage,please place the drain-pipe correctly.
- In order to avoid siphon,the height of drain-pipe should be between (0.85m-1.25m),moreover,the terminal of drain-pipe should not be placed in water.
- If the drain-pipe is too long, please do not force to insert it into washing machine, which would cause abnormal noies. (Please check sketch map next page)

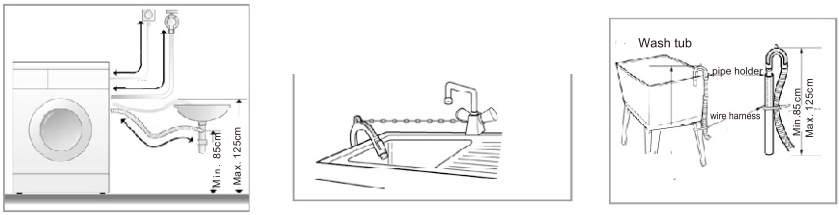

the instruction of installation of pipe

Horizontal Adjustment

- To avoid noise and vibrate by adjusting washing machine level. place it at the room corner preferably.
- If ground not level, please adjust alignment pins.(Do not put wood pieces or something like), please make sure four alignment pins touch ground tightly, and machine level completely.




- Adjust adjustable feet

  Adjust the adjustable feet to make sure the washing machine in balance, which can be placed on the ground steadily. After settling, screw the locknut to guarantee.Do not place the washing machine in the platform ,which is higher than the ground, in order to prevent the machine from falling down because of other accidents.

- The diagonal check

  Applying force downward on the diagonal of the washing machine, washing machine should not shake. (both diagonal need to check, if the washing machine shake, must readjust adjustable foot.)

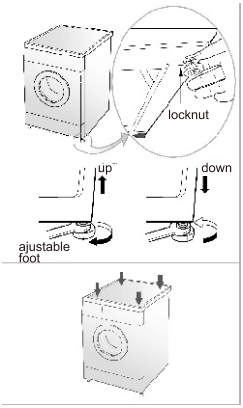

Methods of Door Lock and Remove


DOOR LOCK

- After operating,the door will be locked automatically and "DOOR LOCK" light/picture on the panel is lighting.

Remove Door Lock

- When "DOOR LOCK" light/picture is lighting, press "Start/Pause", WASHING/DRAINING drum stop operating.Please wait for about 2 minutes,door lock will be removed automatically.
- Foam overflowing if open the door during operating, please catch foam with towel.
- If temperature is too high, the door can not be opened during operating.
- If water level is too high, the door can not be open during operating.

The Usage Method of the Detergent Box

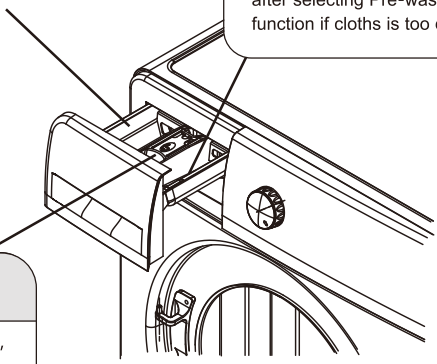

Synthetic Detergent Powder

- Please dissolve detergent (e.g soap pieces)before putting into detergent box.

Liquid detergent. Bleach

- Please use detergent with less foam.
- Please use two times water to dilute the concentrated type detergent before putting into detergent box.

Prewashing Detergent


- Please put moderate detergent after selecting Pre-washing function if cloths is too dirty.

Softener

- Please put softener before washing, which will pour into drum automatically when last potch happening.
- When using concentrated type softener, please dilute it with appropriate water.
- Do not exceed MAX mark.

- Use special detergent.
- Do not use too much detergent which will cause too much foam and affect washing quality or will cause malfunction.
- Select detergent according to cloths variety, color, water temperature and contamination level.
- Please use moderate detergent to get washing effect and protect environment.

Function Introduction of Operating Panel

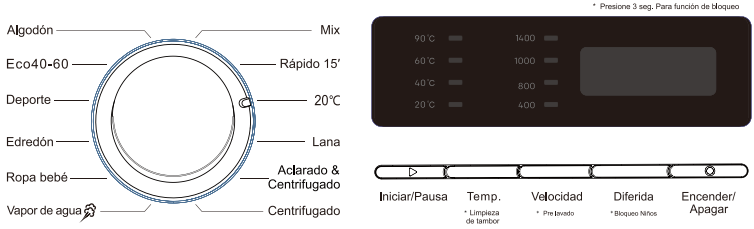

1. Power Button
- Turn on or turn off power.
- When procedure finish, press Power to cut off power.

2. Delay Button
- Delay Time
- Delay time refers to the period from appoint to start.

3. Speed Button
- Select the Speed according to the capacity and variety of cloths.
- Different procedure, different speed select range, but the speed of drum clearance no choice.

4. Temp. Button
- Select water temperature according to the variety and contamination degree.
- Different procedure, different water temperature range, some no choice.

5. Start/Pause Button
- Press it to start operating
- Press it to pause during operation, press again to continue.

6. Program Button
- Select program according to variety and contamination of cloths.

7. Tub Clean
- For the sake of clearing the scouring remained, and completing sterilization&disinfection
- Press Temp. for more than 3 seconds to start tub clean program.

8.Child-Lock Button
- Press it to guard against child operating.
- Child-Lock operating, other buttons unavailable except Power.
- Press Pre Delay for more than 3 second to ON/OFF Child-Lock function.

The introduction of function and program

Usage of routine clothes

1.Preparations

- Open the door put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the power button

3.The programs can be selected according to requirements.

4.Press start/Pause button and begin to wash

5.When all operations finished, the buzzer emits a noise.

- Screen shows END, and buzzer rings.
- Open the door to get cloths out.
- Unplug and turn off the stopcock.

The usage of self-compiled program

Use this when need to set up the temperature, times of rinse and the revolution of spin.

1.Prepare to wash

- Open the door, put clothes in and close the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the power button

3.The programs can be selected according to requirements.

4.Press Temp./Speed/Delay to setup water temperature, dewatering speed and appoint time.

5. Press the Start/Pause button to start washing.

6.When all operations finished, the buzzer emits a noise.

- Screen shows END and buzzer rings.
- Get cloths out .
- Unplug and turn off the stopcock.

The introduction of Wool program

This function is set for woolen and fibrous clothes. Please confirm the washing icon in clothes before washing them.

1.Preparation for washing

- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the power button, connect the power.
3.Rotate the program button and choose the “Wool”
- Please choose appropriate temperature and rotate speed according to requirements.

4.Press the Start/Pause button and begin to wash.
5. When all operations finished, the buzzer emits a noise.

- Washing capacity should be less than 2 kg.
- When finish all programs, please take out all clothes quickly to prevent them from distorting.
- The washing can't be ordered.
- In order to prevent clothes from damaging, the water temperature should be less than 40℃.
- Please separate white or bright color clothes from dark clothes.
- Use the detergent specially for woolen clothes to prevent damaging them.

The introduction for ECO program

Wash the clothes lightly polluted can save time and energy.

1.Preparation for washing
- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2. Press the power button, connect the power.
3. Rotate the program button and choose the “ECO”
- Please choose appropriate temperature and rotate speed according to requirements.

4. Press the Start/Pause button and begin to wash.
5. When all operations finished, the buzzer emits a noise.

- When the washer is working, if you want to change its setting, please press the Start/Pause button to stop running temporarily and then choose the program you need.

The introduction for Baby Care program

This function can use high temperature to sterilize and remove the mites.

1.preparation for washing
- Open the door, put clothes in and closes the door.
- Pull out the detergent box, add detergent and close the box.
- Connect the inlet pipes and make sure the tap turned on.

2.Press the power button, connect the power.
3.Rotate the program button and choose the “Baby Care”
- Please choose appropriate temperature and speed according to requirements.

4.Press the Start/Pause button and begin to wash.
5.When all operations finished, the buzzer emits a noise.

The introduction for Spin program

1. preparation for washing

- Open the door, put clothes in and closes the door.

2. Press the power button, connect the power.

3. Rotate the program button and choose the “Spin”

- Pressing “Speed” button can adjust the speed.

4.Press the Start/Pause button

- Begin to drain away water and spin.

5.When all operations finished, the buzzer emits a noise.

- Before spinning, please make sure there are no nails, keys or other foreign matters in the tub to avoid unnecessary loss.
- During the process of spinning, the actual spinning speed may be inconsistent with the program speed, which is because the washer adjust the speed according to the balance between clothes.
- There may be rhythmic drone during spinning, which is the normal voice of drain bump rather than the machine fault.

The introduction of Tub Clean function

1.Preparation for washing

- Please make sure nothing in the tub before cleaning.
- Open the distribution box, add the liquid bleach in the main box.
- Don't add detergent or laundry detergent to prevent causing too much foam.
- Close the distribution box.
- Please make sure the inlet pipes connected well and the tap turned on.

2.Press the power button, connect the power.

3.Press the “Temp.” button for more than three seconds at the same time, which can choose the tub cleaning program.

4.Press the Start/Pause button.

- The programs begin to operate after the door locked.

5.When all operations finished, the buzzer emits a noise.

- After finish the program, dry the inside part of the machine to prevent the door from distorting.
- If there are children at home, please don't open the door for too much time.

The introduction of Child Lock function

- Prevent children from using the washer.
- Set the solving method: when the washer is operating, press the “ Delay” for more than three seconds and the child-lock works; then pressing “ Delay” for more than three seconds can relieve child-lock.

- When the washer is operating, after setting the child-lock, all buttons cannot work except the power button; once the child-lock is set, when the washer finishes all programs, press the power button to cut the power and the child-lock can't relieve by itself, when the washer operates again, press “ Delay” for mare than three seconds to relieve the child-lock.
- When the child-lock is working, if you want to change the washing program, please relieve child-lock first and restart the machine to choose new washing program; if you want to change the temperature or the speed, please relieve child-lock first, then press the Start/Pause button, and change the temperature and speed at last.

The introduction of washing programs

program	temperature (℃)	revolution (rpm)	time (m)
Cotton	cold water(20℃,40℃,60℃,90℃)	1000(0,400,800,1400)	94
Eco 40-60	40℃(cold water, 20℃,60℃)	1400(0,400,800,1000)	158
Sports	20℃ (cold water , 40℃)	1000(0,400,800)	83
Duvet	60℃(cold water, 20℃,40℃ , 90℃)	1400(0,400,800,1000)	125
Baby Care	60℃(40℃ , 90℃)	1000(0,400,800)	130
Steam	20℃(cold water ,40 ℃,60℃ , 90℃)	800(0,400,1000,1400)	83
Mix	cold water(20℃,40℃)	1000(0,400,800)	73
Quick 15'	cold water(20℃,40℃)	800(0,400,1000)	15
20℃	20℃	1000(0,400,800,1400)	63
Wool	cold water(20℃,40℃)	800(0,400,1000)	57
Rinse+spin	——	1000(0,400,800,1400)	38
Spin	——	1000(0,400,800,1400)	14

- Remarks:
  1.The time consumption will be changed according to the water pressure、cloths variety、quantity、water temperature.
  2.The difference between displayed on screen and actual time consumption will happen.
  3.If speed is too lower, poor washing effect will happen, please add more rinse time.
  4.Different parameters, different models.
  5.When self-designed default procedure is energy procedure, the washing time will be increased automatically.

- The eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle, and that this programme is used to assess the compliance with the EU ecodesign legislation;
- The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration;
- The household washing machine or the household washer-dryer up to the capacity indicated by the manufacturer for the respective programmes will contribute to energy and water savings;
- Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content

- How to find the model information stored in the product database, as defined in Regulation (EU) 2019/2014 by means of a weblink that links to the model information as stored in the product database or a link to the product database and information on how to find the model identifier on the product

- You can Check the manual and the QR code on the energy efficiency label

Maintenance

- Please maintenance washing machine to extend service life.
- Before maintenance, please unplug.

Body of washing machine

After washing, please clean it with soft cloth. If much contamination ,please use appropriate detergent or soap.


- Do not watering directly.
- Do not use putty-powder,diluent, gasoline,alcohol to clean machine body.

Door Gasket Ring

After washing, please remove contamination, wastepaper and so on, if foreign matter exists, please remove.

The Clearance of Detergent Box

Please clean the detergent box regularly. Pull it out and wash with clean water, then insert back.

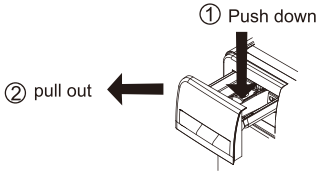

The Clearance of Universal coupling (Suggest:Once/ half year)


- If waste accumulated, it will influence water inlet speed.



1.Take off the soft pipe from connecting part side.
2.Take off the screwing device according to the arrow showed.
3.Wash the inside of the screwing device.
4.Install the cleaned crewing device with the inlet soft pipe.

The clearance of inlet water valve (Suggest:Once/ half year)


1.Take off the soft pipe from washing machine side.
2.Take off the filter net from water valve.
3.Clean the filter net with tooth-brash.
4.Install the soft inlet pipe.

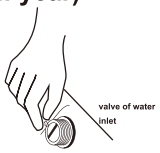

Maintenance

When washing machine is frozen

1.Cover stopcock and connecting part with hot towel.
2.Ake off the inlet pipe, and put it into 50 degree water.
3.Pour into the drum about 2-3L of 50 degree water.
4.Connect inlet pipe, turn on the stopcock and start the washing machine, please check whether inlet and outlet is normal.

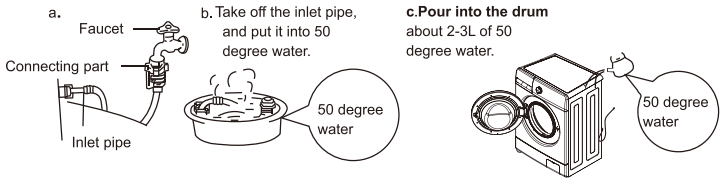

The Clearance of dewatering-pump filter(Suggest: once/month)

1.Press fastener on the pump after dewtering and power off, open the lid of water-pump filter.(Attention: if hot water inside, please go ahead after it be cold.)
2.Take off the filter anti-anticlockwise.
3.Wash the filter.
4.Direct at pump and insert the filter, tighten it clockwise and tighten the lid. Attention: a. Please tighten the filter well to avoid leak.
b. Please do not clean during operation.

The Drum Clearance (Suggest once/month)

After using for a period, some dirt maybe exist. You can clean the inside and outside of drum by operating the drum procedure.
Attention: please do not put cloths and detergent when clearing the drum.

Varieties of Functions

Function	Description	
Child lock	Statement	In order to avoid child misplay
	Setup to remove	During operation, press DELAY for more than 3 seconds, please unplug and or press DELAY to remove Child Lock
compensation of power-off	Statement	when power is connected after power off, the time point will continue from the previous stop time point.
Door self-lock	Statement	After selecting procedure, the door locked automatically, 2 minutes after operation over, lock removed.
Clearance of the drum	Statement	To remove wasted and germ, please sterilize to clean the drum.
	Setup to remove	Press TEMP. for more than 3 seconds to select tub clean.
Delay	Statement	Press DELAY to select time of washing , Display screen shows 24 hours level, one hour/one level . press it for long time, time shows circular.

Notice before Washing

1.Washing guide identification

- Please check cloths washing guide identification,which shows cloths texture and washing method.






2.Classification washing

- Please wash cloth of the same texture, different texture, different water temperature, speed and washing procedure, please split deep colored cloths from white cloths.Split dyed cloths from cotton,otherwise the white cloths would be discolored.If possible, please do not wash high contaminated cloths with clean ones together.

- The degree of pollution (serious,moderate,slight) — classify clothes and wash according to the degree.
- color (white,light color,deep color) — classify them and wash.
- velveteen (easy to fall off, easy to be adhered) — classify the white and the deep color.

3. Notes

- When put big and small clothes together, put the big first and they have to be less than half of total clothes. Please don't wash single cloth because it may cause the trouble of imbalance. Please add one or two similar clothes.
- Small clothes like silk stockings and handkerchiefs should be put into mesh bags to wash. Before washing the bra with steel rings, please take the rings off. If it is inconvenient to do this, please put them into mesh bags to prevent the bra slipping into the gap between internal and external tubs.
- Check all pockets and make sure nothing in them. Nails, hairpin, match, pen, coin and key will damage your washer and clothes.
- Zip up all clothes, fix the button and hook and tie the loose belt, make sure that other clothes cannot be damaged by them.
- Firstly use the water with a little detergent to wash the parts with too many stains, such as collar and cuffs, which can make the clothes cleaner.
- Check the door seals and make sure nothing on them.
- Make sure there is nothing in the tub before washing.
- To make sure there is cloth caught in the door sealing ring,in order to avoid the cloths and door seal ring from damaging.

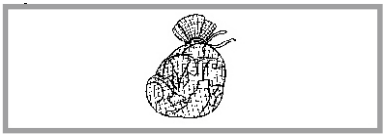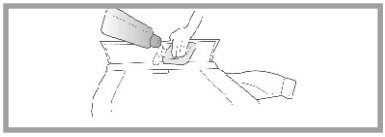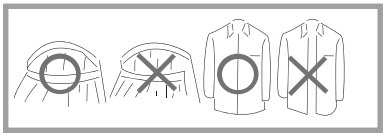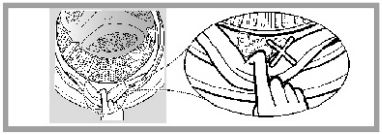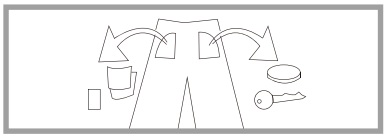
Non-fault conditions

The door can't open.	● The program is running. ● There are clothes between the door and door seals.
There is an odor.	● There may be a smell of rubber because some components are made up of rubber.
There is too little water when wash and rinse.	● Roller washing machine just needs a little water when operating.
No water inflowing.	● Is the tap turned on? ● Is the inlet pipe frozen? ● Are the filters blocked?
Water inflows halfway	● If the water level declines, the washer will supply water automatically.
Water outflows when washing.	● Check if add the detergent with too much bubbles.
Remaining time changes	● If clothes are off center when spin, spinning time will extend to correct the deviation.
There is abnormal noise when spin.	● Check if the power line touches with cabinet. ● Have the transport bolts been dismantled? ● Are there some hairpins or coins in the roller?
The washer can't work after the failure of electricity.	● The washer will stop working after the failure of electricity. When the power is restored, it still can't continue to work. Please press the power button and reset the program.

Troubleshooting guide

Phenomenon	check points	solutions
Washer can't start	● Check if press the power button or start/pause button? ● Is the plug pulling out? ● Is there a power failure? ● Check if cut the leakage protector?	Press the power button or start/pause button. Connect the plug. Please wait. Open the leakage protector.
Spinning screen shows “UE”	● Check if disassemble the carriage bolt? ● Is the machine placed steadily? ● Are the clothes too small or light? ● Are the locknuts on under the feet tightened up?	Disassemble the carriage bolt. Place the machine on a steady ground. Add more clothes. Tighten up the locknuts.
Water inflow screen shows “IE”	● Check if turn the tap off? ● Is the water supply cut off or the water pressure too low? ● Are the water inlet pipes frozen? ● Are the filters blocked?	Open the stopcock. Please wait. Use hot water to unfreeze the pipes. Take out the filters and clean them.
Water outflow screen shows “OE”	● Are the outlet pipes placed too highly? ● Are the outlet pipes frozen? ● Are the outlet pipes blocked? ● Are the floor drain blocked?	Please put away the outlet pipes and make sure the height within 1M. Use hot water to unfreeze the pipes. Take out the foreign matter and dredge the pipes. Clean the floor drain.
Door trouble screen shows “DE”	● Make sure if start the washer without closing the door well.	Make sure the door truly closed
No heating screen shows “EE”	Please pull the plug and entrust the after-sales service	
Continuous water inflow screen shows “FE”	Close the stopcock, pull the plug and entrust the after-sales service.	
The screen shows “LE” or “CE” when wash tub doesn't rotate.	Close the stopcock, pull the plug and entrust the after-sales service.	
Too much foam	● Check if add too much detergent? ● If use the low bubble detergent which is especially for front loading washing machine?	Add reasonable amount of detergent. Use the detergent correctly.

Specification

Model	AQUA8051AS	AQUA9060AS	AQUA1060AS
Rated washing capacity	8.0kg	9.0kg	10.0kg
Rated spinning capacity	8.0kg	9.0kg	10.0kg
Rated voltage	220-240V~,50Hz	220-240V~,50Hz	220-240V~,50Hz
Rated washing power	350W	200W	200W
Rated spinning power	700W	600W	500W
Rated heating power	1600W	2000W	1800W
Maximum power	1750W	2200W	1950W

Specification and feature are subject to change without prior notice for purpose of product improvement .

Environmental Protection

Correct Dispasal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.



PRODUCT FICHE

Supplier's name or trade mark:

Supplier's address ([b]):

Model identifier: AQUA8051AS

General product parameters:

Parameter	Value		Parameter	Value	
Rated capacity ([a]) (kg)	8.0		Dimensions in cm	Height	85
				Width	60
				Depth	51
EEI_W ([a])	52.0		Energy efficiency class ([a])	A	
Washing efficiency index ([a])	1.031		Rinsing effectiveness (g/kg) ([a])	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used.	0.473		Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water con-sumption will depend on how the appliance is used and on the hardness of the water.	37	
Maximum temperature inside the treated textile ([a]) (°C)	Rated capacity	33	Remaining moisture content ([a]) (%)	53.9	
	Half	28			
	Quarter	23			
Spin speed ([a]) (rpm)	Rated capacity	1400	Spin-drying efficiency class ([a])	B	
	Half	1400			
	Quarter	1400			
Programme duration ([a]) (h:min)	Rated capacity	3:38	Type	free-standing	
	Half	2:50			
	Quarter	2:50			
Airborne acoustical noise emissions in the spinning phase ([a]) (dB(A) re 1 pW)	76		Airborne acoustical noise emis-sion class ([a]) (spinning phase)	B	
Off-mode (W)	0.52		Standby mode (W)	N/A	
Delay start (W) (if applicable)	4.00		Networked standby (W) (ifapplicable)	N/A	

Minimum duration of the guarantee offered by the supplier ([b]):

This product has been designed to release silver ions during the washing cycle	NO

Additional information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) (b) is found:

([a]) for the eco 40-60 programme.
([b]) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
([c]) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

Information to be included in the technical documentation for household washing machines

PARAMETER	UNIT	VALUE
Rated capacity for the eco 40-60 programme, at 0,5 kg intervals (c)	kg	8.0
Energy consumption of the eco 40-60 programme at rated capacity ($E_{W,full}$)	kWh/cycle	0.747
Energy consumption of the eco 40-60 programme at half rated capacity ($E_{W,½}$)	kWh/cycle	0.425
Energy consumption of the eco 40-60 programme at quarter rated capacity ($E_{W,1/4}$)	kWh/cycle	0.214
Weighted energy consumption of the eco 40-60 programme (E_W)	kWh/cycle	0.473
Standard energy consumption of the eco 40-60 programme (SCE_W)	kWh/cycle	0.909
Energy Efficiency Index (EEI_W)	—	52.0
Water consumption of the eco 40-60 programme at rated capacity ($W_{W,full}$)	L/cycle	50.0
Water consumption of the eco 40-60 programme at half rated capacity ($W_{W,½}$)	L/cycle	35.0
Water consumption of the eco 40-60 programme at quarter rated capacity ($W_{W,1/4}$)	L/cycle	25.0
Weighted water consumption (W_W)	L/cycle	37
Washing efficiency index of the eco 40-60 programme at rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at half rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at quarter rated capacity (I_w)	—	1.031
Rinsing effectiveness of the eco 40-60 programme at rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at half rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at quarter rated capacity (I_R)	g/kg	5.0
Programme duration of the eco 40-60 programme at rated capacity (t_w)	h:min	3:38
Programme duration of the eco 40-60 programme at half rated capacity (t_w)	h:min	2:50
Programme duration of the eco 40-60 programme at quarter rated capacity (t_w)	h:min	2:50
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at rated capacity (T)	°C	33
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at half rated capacity (T)	°C	28
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at quarter rated capacity (T)	°C	23
Spin speed in the spinning phase of the eco 40-60 programme at rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at half rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at quarter rated capacity (S)	rpm	1400
Weighted remaining moisture content (D)	%	53.9
Airborne acoustical noise emissions during eco 40-60 programme (spinning phase)	dB(A) re 1 pW	76
Power consumption in 'off mode' (P_o)	W	0.52
Power consumption in 'standby mode' (P_{sm})	W	N/A
Does 'standby mode' include the display of information?	—	NO
Power consumption in 'standby mode' (P_{sm}) in condition of networked standby (if applicable)	W	N/A
Power consumption in 'delay start' (P_{ds}) (if applicable)	W	4.00

PRODUCT FICHE

Supplier's name or trade mark:

Supplier's address ([b]):

Model identifier: AQUA9060AS

General product parameters:

Parameter	Value		Parameter	Value	
Rated capacity ([a]) (kg)	9.0		Dimensions in cm	Height	85
				Width	60
				Depth	60
EEI_W ([a])	51.9		Energy efficiency class ([a])	A	
Washing efficiency index ([a])	1.031		Rinsing effectiveness (g/kg) ([a])	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used.	0.494		Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water con-sumption will depend on how the appliance is used and on the hardness of the water.	45	
Maximum temperature inside the treated textile ([a]) (°C)	Rated capacity	30	Remaining moisture content ([a]) (%)	53.9	
	Half	29			
	Quarter	21			
Spin speed ([a]) (rpm)	Rated capacity	1400	Spin-drying efficiency class ([a])	B	
	Half	1400			
	Quarter	1400			
Programme duration ([a]) (h:min)	Rated capacity	3:48	Type	free-standing	
	Half	2:54			
	Quarter	2:54			
Airborne acoustical noise emissions in the spinning phase ([a]) (dB(A) re 1 pW)	76		Airborne acoustical noise emis-sion class ([a]) (spinning phase)	B	
Off-mode (W)	0.50		Standby mode (W)	N/A	
Delay start (W) (if applicable)	4.00		Networked standby (W) (ifapplicable)	N/A	

Minimum duration of the guarantee offered by the supplier ([b]):

This product has been designed to release silver ions during the washing cycle	NO

Additional information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) (b) is found:

([a]) for the eco 40-60 programme.
([b]) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
([c]) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

Information to be included in the technical documentation for household washing machines

PARAMETER	UNIT	VALUE
Rated capacity for the eco 40-60 programme, at 0,5 kg intervals (c)	kg	9.0
Energy consumption of the eco 40-60 programme at rated capacity ($E_{W,full}$)	kWh/cycle	0.794
Energy consumption of the eco 40-60 programme at half rated capacity ($E_{W,½}$)	kWh/cycle	0.494
Energy consumption of the eco 40-60 programme at quarter rated capacity ($E_{W,1/4}$)	kWh/cycle	0.240
Weighted energy consumption of the eco 40-60 programme (E_W)	kWh/cycle	0.494
Standard energy consumption of the eco 40-60 programme (SCE_W)	kWh/cycle	0.951
Energy Efficiency Index (EEI_W)	—	51.9
Water consumption of the eco 40-60 programme at rated capacity ($W_{W,full}$)	L/cycle	60.0
Water consumption of the eco 40-60 programme at half rated capacity ($W_{W,½}$)	L/cycle	40.0
Water consumption of the eco 40-60 programme at quarter rated capacity ($W_{W,1/4}$)	L/cycle	35.0
Weighted water consumption (W_W)	L/cycle	45
Washing efficiency index of the eco 40-60 programme at rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at half rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at quarter rated capacity (I_w)	—	1.031
Rinsing effectiveness of the eco 40-60 programme at rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at half rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at quarter rated capacity (I_R)	g/kg	5.0
Programme duration of the eco 40-60 programme at rated capacity (t_w)	h:min	3:48
Programme duration of the eco 40-60 programme at half rated capacity (t_w)	h:min	2:54
Programme duration of the eco 40-60 programme at quarter rated capacity (t_w)	h:min	2:54
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at rated capacity (T)	°C	30
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at half rated capacity (T)	°C	29
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at quarter rated capacity (T)	°C	21
Spin speed in the spinning phase of the eco 40-60 programme at rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at half rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at quarter rated capacity (S)	rpm	1400
Weighted remaining moisture content (D)	%	53.9
Airborne acoustical noise emissions during eco 40-60 programme (spinning phase)	dB(A) re 1 pW	76
Power consumption in 'off mode' (P_o)	W	0.50
Power consumption in 'standby mode' (P_{sm})	W	N/A
Does 'standby mode' include the display of information?	—	NO
Power consumption in 'standby mode' (P_{sm}) in condition of networked standby (if applicable)	W	N/A
Power consumption in 'delay start' (P_{ds}) (if applicable)	W	4.00

PRODUCT FICHE

Supplier's name or trade mark:

Supplier's address ([b]):

Model identifier: AQUA1060AS

General product parameters:

Parameter	Value		Parameter	Value	
Rated capacity ([a]) (kg)	10.0		Dimensions in cm	Height	85
				Width	60
				Depth	60
EEI_W ([a])	52.0		Energy efficiency class ([a])	A	
Washing efficiency index ([a])	1.031		Rinsing effectiveness (g/kg) ([a])	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme. Actual energy consumption will depend on how the appliance is used.	0.514		Water consumption in litre per cycle, based on the eco 40-60 programme. Actual water con-sumption will depend on how the appliance is used and on the hardness of the water.	51	
Maximum temperature inside the treated textile ([a]) (°C)	Rated capacity	33	Remaining moisture content ([a]) (%)	53.9	
	Half	29			
	Quarter	20			
Spin speed ([a]) (rpm)	Rated capacity	1400	Spin-drying efficiency class ([a])	B	
	Half	1400			
	Quarter	1400			
Programme duration ([a]) (h:min)	Rated capacity	3:59	Type	free-standing	
	Half	3:00			
	Quarter	3:00			
Airborne acoustical noise emissions in the spinning phase ([a]) (dB(A) re 1 pW)	76		Airborne acoustical noise emis-sion class ([a]) (spinning phase)	B	
Off-mode (W)	0.50		Standby mode (W)	N/A	
Delay start (W) (if applicable)	4.00		Networked standby (W) (ifapplicable)	N/A	

Minimum duration of the guarantee offered by the supplier ([b]):

This product has been designed to release silver ions during the washing cycle	NO

Additional information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Commission Regulation (EU) 2019/2023 (1) (b) is found:

([a]) for the eco 40-60 programme.
([b]) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
([c]) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

Information to be included in the technical documentation for household washing machines

PARAMETER	UNIT	VALUE
Rated capacity for the eco 40-60 programme, at 0,5 kg intervals (c)	kg	10.0
Energy consumption of the eco 40-60 programme at rated capacity ($E_{W,full}$)	kWh/cycle	0.900
Energy consumption of the eco 40-60 programme at half rated capacity ($E_{W,½}$)	kWh/cycle	0.535
Energy consumption of the eco 40-60 programme at quarter rated capacity ($E_{W,1/4}$)	kWh/cycle	0.245
Weighted energy consumption of the eco 40-60 programme (E_W)	kWh/cycle	0.514
Standard energy consumption of the eco 40-60 programme (SCE_W)	kWh/cycle	0.988
Energy Efficiency Index (EEI_W)	—	52.0
Water consumption of the eco 40-60 programme at rated capacity ($W_{W,full}$)	L/cycle	65.0
Water consumption of the eco 40-60 programme at half rated capacity ($W_{W,½}$)	L/cycle	55.0
Water consumption of the eco 40-60 programme at quarter rated capacity ($W_{W,1/4}$)	L/cycle	40.0
Weighted water consumption (W_W)	L/cycle	51
Washing efficiency index of the eco 40-60 programme at rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at half rated capacity (I_w)	—	1.031
Washing efficiency index of the eco 40-60 programme at quarter rated capacity (I_w)	—	1.031
Rinsing effectiveness of the eco 40-60 programme at rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at half rated capacity (I_R)	g/kg	5.0
Rinsing effectiveness of the eco 40-60 programme at quarter rated capacity (I_R)	g/kg	5.0
Programme duration of the eco 40-60 programme at rated capacity (t_w)	h:min	3:59
Programme duration of the eco 40-60 programme at half rated capacity (t_w)	h:min	3:00
Programme duration of the eco 40-60 programme at quarter rated capacity (t_w)	h:min	3:00
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at rated capacity (T)	°C	33
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at half rated capacity (T)	°C	29
Temperature reached for minimum 5 min inside the load during eco 40-60 programme at quarter rated capacity (T)	°C	20
Spin speed in the spinning phase of the eco 40-60 programme at rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at half rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at quarter rated capacity (S)	rpm	1400
Weighted remaining moisture content (D)	%	53.9
Airborne acoustical noise emissions during eco 40-60 programme (spinning phase)	dB(A) re 1 pW	76
Power consumption in 'off mode' (P_o)	W	0.50
Power consumption in 'standby mode' (P_{sm})	W	N/A
Does 'standby mode' include the display of information?	—	NO
Power consumption in 'standby mode' (P_{sm}) in condition of networked standby (if applicable)	W	N/A
Power consumption in 'delay start' (P_{ds}) (if applicable)	W	4.00



INFORMAZIONI AGLI UTENTI

ai sensi del Decreto Legislativo N° 49 del 14 Marzo 2014

"Attuazione della Direttiva 2012/19/UE sui rifiuti di apparecchiature elettriche ed elettroniche (RAEE)"

Il simbolo del cassonetto barrato riportato sull'apparecchiatura indica che il prodotto alla fine della propria vita utile deve essere raccolto separatamente dagli altri rifiuti. L'utente dovrà, pertanto, conferire l'apparecchiatura integra dei componenti essenziali giunta a fine vita agli idonei centri di raccolta differenziata dei rifiuti elettronici ed elettrotecnici, oppure riconsegnarla al rivenditore al momento dell'acquisto di nuova apparecchiatura di tipo equivalente, in ragione di uno a uno, oppure 1 a zero per le apparecchiature aventi lato maggiore inferiore a 25 cm. L'adeguata raccolta differenziata per l'avvio successivo dell'apparecchiatura dimessa al riciclaggio, al trattamento e allo smaltimento ambientale compatibile contribuisce ad evitare possibili effetti negativi sull'ambiente e sulla salute e favorisce il riciclo dei materiali di cui è composta l'apparecchiatura. Lo smaltimento abusivo del prodotto da parte dell'utente comporta l'applicazione delle sanzioni amministrative di cui al D.Lgs n. Decreto Legislativo N° 49 del 14 Marzo 2014.

LVD no.:GZES1505005253HS
EMC no.:GZEM111000395108/GZEM111000395108V
ERP no.: GZES1407008250HS
REACH no.: CANEC1404704601
Barni Carlo Spa , via Arconate n. 63 20038 Busto Garolfo (Milano)
Made in China

you can download the user manual related to new energy label for regulation EU 2019/2014, 2019/2023 on website www.barni.it